



## ADJUSTING INSTRUCTIONS

For the mask to be fully effective, it must be adjusted properly. If you cannot get a proper fit, do not enter the contaminated area. Consult your supervisor for proper respiratory protection. Our masks are intended for industrial and non-medical use.

### WITHOUT VALVE

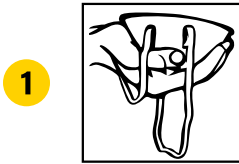

Hold the respirator in one hand with the nose area at your fingertips, allowing the headbands to hang below your hand.

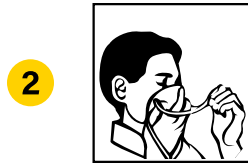

Press the respirator against your face with the nose foam on the bridge of your nose.



Place the top band high on the back of your head. Move the bottom band over your head and position it below your ears.



To test the fit, cup both hands over the respirator and exhale vigorously. If any leakage is detected, readjust it by repeating steps 2 to 4.

### WITH VALVE

To make sure that a mask with a valve is correct, you must follow the same steps as adjusting the mask without a valve except that in step 4 you must inhale instead of exhaling.



To test the fit, cup both hands over the respirator and inhale vigorously. If no negative pressure is felt inside the mask, readjust it by repeating steps 2 to 4.

### WITH NOSE CLIP

If the mask has a nose clip, using both hands, press on the nose clip to mould it to the shape of your nose.

